

To protect the appearance and integrity of your new Model 2000 Imprinter, only mild detergent cleansers should be used on the machine.

Addressograph products are sold and serviced by:



NBS Technologies Inc.
20614 Eastleigh Crescent
Langley, BC
V3A 4C4

T: 604-530-6012 or
1-800-667-8481
F: 604-530-9685
E: info@nbstech.com

For information on this and other NBS products, please visit our website at www.nbstech.com

OPERATING INSTRUCTIONS

ELECTRIC IMPRINTER 2000 SERIES



Before attempting to connect, operate, or adjust this product, please read these instructions completely.



NBS Technologies is an authorized reseller of
Addressograph products

I. INSERT CARD

With head open (normal resting position), insert the embossed card into the cardholder. Cardholders are usually four cornered, but they may vary depending on customer requirements.

Some units have a removable station plate. Place the station plate in the unit at this time

CAUTION: When unit is in use, access to plug must not be obstructed.



II. INSERT FORM

Place the form over the embossed card (and station plate if provided). Locate the form within fixed guides or guide lines, or estimate its location, depending upon the configuration that you ordered.



III. IMPRINTING THE FORM

Gently lower the head by exerting fingertip pressure on the plastic handle. The imprinter head will lock into position and you will hear the motor run for a brief instant (less than a second)

DO NOT SLAM DOWN! THIS WILL DAMAGE YOUR MACHINE.



IV. RAISE HEAD

When the motor sound stops, release pressure and allow the spring to return the head to its open position. Keep your hand on the handle to prevent the head from snapping back.

Remove the imprinted form, embossed card and (if used) removable station plate.

